

Now all you
need is
ONE product!



- **Diamond suspension and cooling lubricant combined into one product**
- **Easier to use than other diamond products**
- **Cost-effective materiallographic preparation**

DiaDuo makes it easier to prepare materiallographic samples with diamonds. The diamond suspension and the necessary amount of cooling lubricant are combined into one product! You will therefore always apply the correct amount of diamonds automatically.

DiaDuo is economical in use. You will never overdose the expensive diamonds

The ratio of diamonds and lubricant has been selected carefully, and is based on many years of experience at Struers. You will therefore never overdose the expensive diamonds which might easily happen if you use diamond paste, spray or try to apply suspensions manually.

DiaDuo is easy to dose


Just one product makes it easier for you to apply the diamonds and the lubricant for cooling and lubrication.

Apply DiaDuo to the correct level of lubrication

When you use DiaDuo, you only have to follow this rule of thumb: apply as much DiaDuo as needed to achieve the correct lubrication of the cloth. This is for predosing as well as dosing during preparation.

DiaDuo gives reproducible results, even when you prepare samples manually

Since you don't have to worry about the dosing relation between diamonds and lubricant, you will easily get reproducible preparation results - even if you apply DiaDuo manually.

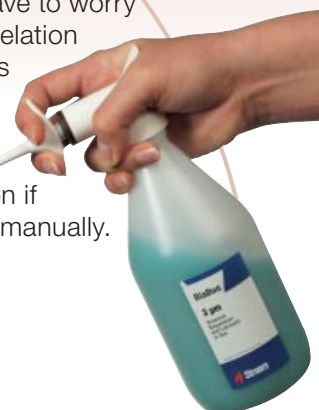

DiaDuo gives you all you need in one product



Several dosing systems available

Struers offers you various types of dosing systems. If you prefer to apply DiaDuo manually, you can use the DiaDuo container with the provided insert directly, or you can use a manual dispenser of your choice.

DiaDuo lets you increase the level of automation of your system

With a simple dosing system you can increase the level of automation of your grinding and polishing system, giving you the freedom to attend to other tasks during the preparation steps. Struers offers you a single doser for the LaboSystem, and the dosing system TriPlus, with three units which is adjustable in height and can be used together with all equipment.

Real cooling and lubricating performance

As a unique all in one product, DiaDuo features real cooling and lubricating performance ensuring excellent preparation results. Further, DiaDuo is highly stable making it ideal for use in dosing systems.

Removable labels

DiaDuo has labels with a removable tab. The self-adhesive tab can be placed on dispensers and dosers.

Product specifications DiaDuo

Diamond suspension containing premium quality diamonds and cooling lubricant. For all-purpose materialographic fine grinding and polishing. DiaDuo contains alcohol.



Grain size	Contents	Code
15 µm	500 ml	40600261 PALFI
9 µm	500 ml	40600260 PALNI
6 µm	500 ml	40600259 PALEX
3 µm	500 ml	40600258 PALTE
1 µm	500 ml	40600257 PALNO
15 µm	5 l	40600266 PLUFI
9 µm	5 l	40600265 PLUNI
6 µm	5 l	40600264 PLUEX
3 µm	5 l	40600263 PLUTE
1 µm	5 l	40600262 PLUON

Dispensers and Dosers

Specification		Code
Single doser for LaboSystem		05216908 DRILU
TriPlus, dosing system with three units		05216907 TRILE
Dosing gun with 500 ml bottle		40700031 DOSIL
Squeeze bottle, 250 ml		40700032 DOSES

Dispensers and dosers should be cleaned in water, not alcohol



Struers A/S
Pederstrupvej 84
DK-2750 Ballerup, Denmark
Phone +45 44 600 800
Fax +45 44 600 801
e-mail: struers@struers.dk
www.struers.com



DEUTSCHLAND
Struers GmbH
Karl-Arnold-Strasse 13 B
D-47877 Willich
Telefon +49/(0) 21 54/4 86-0
e-mail: verkauf.struers@struers.de

ÖSTERREICH
Struers GmbH
Zweigniederlassung Österreich
Ginzkeyplatz 10
A-5020 Salzburg
Telefon (0662) 625711
e-mail: stefan.lintschinger@struers.de

SCHWEIZ
Struers GmbH
Zweigniederlassung Schweiz
Weissenbrunnstrasse 41
CH-8903 Birmensdorf
Telefon (01) 77763-07
e-mail: rudolf.weber@struers.de

THE NETHERLANDS
Struers GmbH Nederland
Electraweg 5
NL-3144 CB Maassluis
Tel.: +31 (0) 10 599 72 09
e-mail: glen.van.vugt@struers.de

CZECH REPUBLIC
Struers GmbH
Ocelářská 799
CZ-190 00 Praha 9
Tel. 02 / 84 818 227
e-mail: david.cernicky@struers.de

POLAND
Struers Sp. z o.o.
Oddział w Polsce
ul. Lirowa 27
PL-02-387 Warszawa
Tel.: 022/824 52 80
e-mail: grzegorz.uszynski@struers.de

FRANCE
Struers S.A.S.
370, rue du Marché Rollay
F- 94507 Champigny
sur Marne Cedex
Téléphone +33 1 55 09 14 30/31
e-mail: struers@struers.fr

BELGIQUE
Struers S.A.S.
370, rue du Marché Rollay
F- 94507 Champigny
sur Marne Cedex
Téléphone +32 43 70 93 18
e-mail: struers@struers.fr

JAPAN
Marumoto Struers K.K.
Takara 3rd Building
18-6, Higashi Ueno 1-chome
Taito-ku, Tokyo 110-0015,
Phone: +81 3 5688-2914
e-mail: struers@struers.co.jp

SINGAPORE
Struers A/S
10 Eunos Road 8, #12-06 North Lobby
Singapore Post Centre
Singapore 408600
Phone +65 6299 2268
e-mail: struers.sg@struers.dk

UNITED KINGDOM
Struers Ltd.
Erskine Ferry Road, Old Kilpatrick
Glasgow, G60 5EU
Phone 01 389 877 222
e-mail: info@struers.co.uk

USA
Struers Inc.
24766 Detroit Road
Westlake, OH 44145
Phone (888) 787-8377
e-mail: info@struers.com

Struers' products are subject to constant product development. Therefore, we reserve the right to introduce changes in our products without notice.